

MCT-302T

Supervised PowerCode Magnetic Contact Transmitter



Installation Instructions

1. INTRODUCTION

The MCT-302T is a fully supervised, PowerCode magnetic contact transmitter. It features a built-in reed switch (that opens upon removal of a magnet placed near it) and an auxiliary hard-wired input, programmable as either N.C. or E.O.L., for use with additional sensors - pushbuttons, detectors, door contacts etc.

An on-board DIP switch allows the installer to disable the magnet-operated reed switch if only the auxiliary input is needed.

The reed switch and the auxiliary input behave as separate transmitters, although they trigger the same RF module into transmission. Each input has a unique 24-bit PowerCode ID, selected in the factory from over 16 million possible code combinations.

Upon alarm, a digital message is transmitted, composed of the disturbed input's PowerCode ID followed by various status and message-type markers. Alarm and other data are thus forwarded to the receiver. Since messages transmitted by the MCT-302T might collide with transmissions from other PowerCode transmitters, a "smart" anti-collision transmission sequence is used.

An on-board tamper switch opens when the cover is removed, and an "under-board" tamper switch opens if the unit is forcibly removed from its mounting place. In a tamper situation, a tamper message is transmitted from the reed switch input. If the installer disables the reed switch, tamper is reported by the auxiliary input instead.

A periodic supervision message, distinguished by a specific marker, is transmitted automatically once in 60 min. (USA) or 15 min.

(Europe) or according to local standards from the reed switch input only (if enabled) or from the auxiliary input only (if the reed switch is disabled). The target receiver is thus informed, at regular intervals, of the unit's active participation in the system.

An LED lights whenever alarm or tamper events are reported. The LED does not light while a supervision message is being transmitted.

Operating power is obtained from an on-board 3.0 V Lithium Thionyl Chloride battery. A weak battery will cause a "low battery" marker to be added to any message transmitted. When a low battery message is received and indicated by the receiving system (i.e. PowerMax+) the battery in the MCT-302T must be replaced with a new battery as soon as possible and before 30 days.

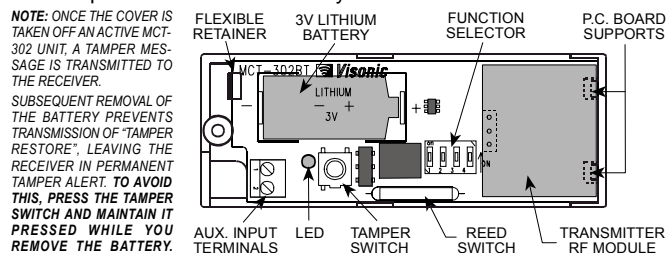


Figure 1. MCT-302T with Cover Removed

2. SPECIFICATIONS

Frequency (MHz): 315, 433.92, 868.95, 869.2625 or other per local requirements

Transmitter's ID Code: 24-bit digital word, over 16 million combinations, pulse width modulation.

Overall Message Length: 36 bits

Alarm Inputs: 2, one internal and one external, with a separate 24-bit transmitter ID each.

Auxiliary Input Circuit Type: N.C. / E.O.L., selected with DIP switch

E.O.L. Resistor Required: 47 kΩ

Brake and Make Distances: Brake (any direction) 18-23mm. Make 16-20mm

Message Repetition: Repetitive transmission (once every 3 minutes) or one-shot, as selected with on-board DIP switch.

Supervision: Signaling at 60 min. (USA) or 15 min. (Europe) intervals or according to local standards.

Response to Tamper Event: Tamper report every 3 minutes (until the tamper switch re-closes).

Power Source: 3V Lithium battery, Panasonic type CR-2 or equivalent

Battery Life Expectancy: 3 years (for typical use)

Battery Supervision: Automatic transmission of battery condition data as part of any status report.

Operating Temperature: 0°C to 49°C (32°F to 120°F).

Dimensions: 81 x 22 x 23.5 mm (3-3/16 x 7/8 x 15/16 in.).

Weight: MCT-302T (excluding battery): 34 g (1.2 oz)

Magnet: 13 g (0.45 oz)

Standards: Meets FCC Part 15, MPT1349 and Directive 1999/5/EC, EN50131-1 Grade 2, Class II.

This device complies with Part 15 of the FCC Rules and RSS-210 of Industry and Science Canada. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

This device complies with the essential requirements and provisions of Directive 1999/5/EC of the European Parliament and of the Council of 9 March 1999 on radio and telecommunications terminal equipment.

3. INSTALLATION

3.1 Mounting

It is highly recommended to attach the transmitter to the top of the door/window, on the fixed frame and the magnet to the movable part (door or window), as shown in Figure 2. Make sure that the magnet is located not more than 6 mm (0.25 in.) from the transmitter's marked side.

A. Remove the case closure screw by using a suitable screwdriver (Figure 3).

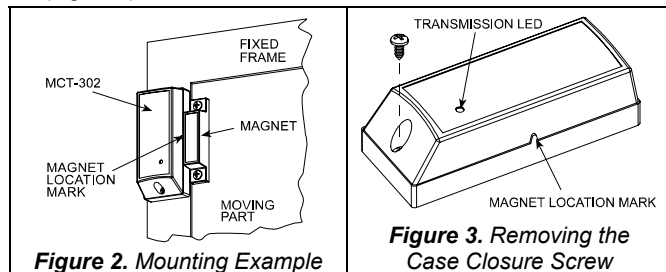


Figure 2. Mounting Example

Figure 3. Removing the Case Closure Screw

B. Remove the unit's cover as shown in Figure 4.

C. Flex out the circuit board retainer (Figures 1 and 5) and detach the circuit board from the base. **Take care not to break the glass of the reed switch at the side of the board!**

D. Hold the base against the mounting surface and mark the 3 drilling points through the mounting holes.

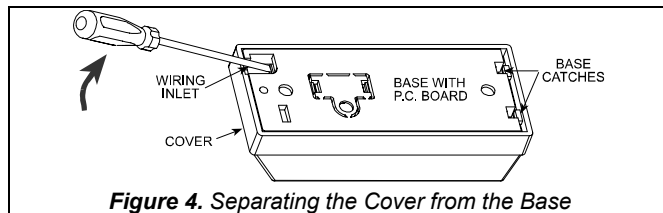


Figure 4. Separating the Cover from the Base

Attention! The MCT-302T carries an additional tamper switch under the board. This switch is actuated by a leaf spring, mounted on a small base segment that is loosely connected to the base (see Figure 5). Be sure to make use of the screw that fastens the tamper switch actuator to the mounting surface. If the actuator is secured and the MCT-302T is forcibly removed from its mounting place, the actuator will break away from the base, causing the tamper switch to open. A tamper alarm will consequently be transmitted.

E. Drill the holes and fix the base to the wall using the 3 screws with countersunk heads supplied in the package.

CAUTION! Screws with other type or size of head may short circuit the bottom side of the printed circuit board.

F. Mount the magnet near the marked side of the MCT-302T.

G. Insert the edge of the P.C. board with the RF module into the edge supports, and press the other edge against the flexible retainer until it snaps home with a click.


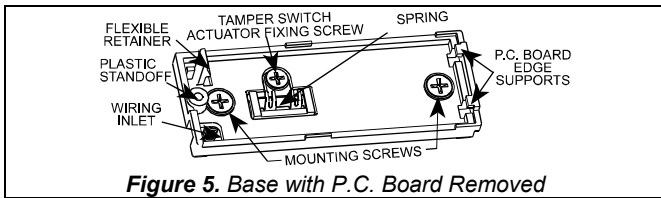


Figure 5. Base with P.C. Board Removed

3.2 Auxiliary Input Wiring

Remember! If your application does not require the auxiliary input, be sure to set DIP switch SW2 to OFF and to short the input terminals together with a piece of jumper wire.

- Connect the auxiliary detector's alarm contacts across the MCT-302T auxiliary input terminals.
- If the auxiliary input of the MCT-302T is defined as a Normally Closed (N.C.) type (SW2 set to OFF), series connected N.C. sensor contacts must be used exclusively. An E.O.L. resistor will not be required.
- If the auxiliary input is defined as an E.O.L. type (SW2 set to ON), Normally Closed (N.C.) as well as Normally Open (N.O.) sensor contacts can be used. A 47kΩ E.O.L. resistor must be wired at the far end of the zone loop, as in Figure 6.

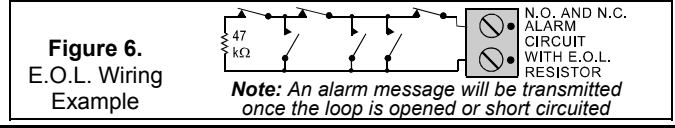

4. PREPARATION FOR USE

4.1 The Function Switches

A. Switch Tasks

The MCT-302T has a 4-position DIP switch function selector (Figure 7). Each switch lever allows you to select one of two options.

B. Setting the Switches

Set the function switches as desired prior to applying power. Use a ball point pen or another pointed object to shift the switch levers. The ON position is indicated by the arrow on the switch body.



Figure 7. Function Selector

Table 1. Getting acquainted with the function selector

Sw-	Function	Pos.	Selected Option	Default
SW1	Reed switch input enable/disable	ON OFF	Reed switch input is enabled Reed switch input is disabled	ON*
SW2	Aux. input type selector	ON OFF	Aux. input is E.O.L. (47 kΩ) Aux. input is N.C.	OFF
SW3	Restore reports enable/disable	ON OFF	Restore events reported Restore events not reported	ON**
SW4	Transmit mode selector	ON OFF	Alarms reported every 3 min. Alarms reported only once	OFF***

* With SW1 set to OFF, the reed switch input will not initiate periodic supervision transmissions (The AUX input will initiate supervision transmission).

** Selecting the ON position enables you to find out whether the door or window under surveillance are open or closed.

*** Transmissions initiated by "tamper" events will be repeated once every 3 minutes, regardless of SW4 setting.

4.2 Testing the Unit

Before testing, set DIP switches SW1 through SW4 as required for the particular application (Para. 4.1).

- Insert the battery between the battery clips, at the correct polarity. For proper operation, only Lithium Thionyl Chloride battery (Panasonic type CR-2 or equivalent) should be used.
- Press the tamper switch once and release it.

Note: Since the cover is removed and power is applied, a tamper situation exists. Verify that the MCT-302T transmits (the LED lights briefly) once every 3 minutes.

- When you are satisfied that tamper alerts are transmitted properly, put the cover on to return the tamper switch to its normal (undisturbed) position. Wait slightly over 3 minutes to verify that tamper transmissions cease. If all went well, secure the front cover to the base with the case closure screw.
- Momentarily open the door or window and verify that the transmitter LED lights, indicating that transmission is in progress. If SW4 is ON, wait 3 minutes to verify that the transmission is repeated at 3-minute intervals.
- Close the door or window, thus restoring it to the undisturbed state and watch the LED. If SW3 is set to ON, a "restore" transmission will now take place.
- If the auxiliary input is used, momentarily activate the detector connected to it and check for a response similar to that described in D above. Then restore the input loop to its undisturbed state. The response should be as in E above.
- Refer to the target receiver's installation instructions, and let the receiver "learn" the ID codes associated with the reed switch (if used) and the auxiliary input (if used).

ATTENTION! Each input of the MCT-302T has a different ID. You must enroll the ID that you are using (if you are using the internal reed switch, activate the reed switch. If you are using the AUX input, trigger this input. If you are using both, activate the reed switch and then trigger the AUX input, or vice versa).

With the target receiver in the LEARN mode, an alarm transmission from each input will enroll the input's ID in the receiver's memory.

Note Regarding Tamper Message Transmission

- If the reed switch input is enabled (SW1 is ON), the tamper message will be sent with the reed switch's ID.

- If the reed switch input is disabled (SW1 is OFF), the tamper message will be sent with the auxiliary input's ID.

Note Regarding transmission LED

The red transmission LED can be removed by soldering it out of the PCB. The LED can be remounted by soldering it in the PCB. Any alternation of this product is made on the owners responsibility.

5. MISCELLANEOUS COMMENTS

Visonic Ltd. wireless systems are very reliable and are tested to high standards. However, due to low transmitting power and limited range (required by FCC and other regulatory authorities), there are some limitations to be considered:

- Receivers may be blocked by radio signals occurring on or near their operating frequencies, regardless of the digital code used.

- A receiver responds only to one transmitted signal at a time.
- Wireless devices should be tested regularly to determine whether there are sources of interference and to protect against faults.

The user is cautioned that changes or modifications to the unit, not expressly approved by Visonic Ltd., could void the user's FCC or other authority to operate the equipment.

	<p>W.E.E.E. Product Recycling Declaration For information regarding the recycling of this product you must contact the company from which you originally purchased it. If you are discarding this product and not returning it for repair then you must ensure that it is returned as identified by your supplier. <u>This product is not to be thrown away with everyday waste.</u> Directive 2002/96/EC Waste Electrical and Electronic Equipment.</p>
--	---

<p>WARRANTY Visonic Ltd. and/or its subsidiaries and its affiliates ("the Manufacturer") warrants its products hereinafter referred to as "the Product" or "Products" to be in conformance with its own plans and specifications and to be free of defects in materials and workmanship under normal use and service for a period of twelve months from the date of shipment by the Manufacturer. The Manufacturer's obligations shall be limited within the warranty period, at its option, to repair or replace the product or any part thereof. The Manufacturer shall not be responsible for dismantling and/or reinstallation charges. To exercise the warranty the product must be returned to the Manufacturer freight prepaid and insured. This warranty does not apply in the following cases: improper installation, misuse, failure to follow installation and operating instructions, alteration, abuse, accident or tampering, and repair by anyone other than the Manufacturer. This warranty is exclusive and expressly in lieu of all other warranties, obligations or liabilities, whether written, oral, express or implied, including any warranty of merchantability or fitness for a particular purpose, or otherwise. In no case shall the Manufacturer be liable to anyone for any consequential or incidental damages for breach of this warranty or any other warranties whatsoever, as aforesaid. This warranty shall not be modified, varied or extended, and the Manufacturer does not authorize any person to act on its behalf in the modification, variation or extension of this warranty. This warranty shall apply to the Product only. All products, accessories or attachments of others used in conjunction with the Product, including batteries, shall be covered solely by their own warranty, if any. The Manufacturer shall not be liable for any damage or loss whatsoever, whether directly, indirectly, incidentally, consequentially or otherwise, caused by the malfunction of the Product due to products, accessories, or attachments of others, including batteries, used in conjunction with the Products.</p>	<p>The Manufacturer does not represent that its Product may not be compromised and/or circumvented, or that the Product will prevent any death, personal and/or bodily injury and/or damage to property resulting from burglary, robbery, fire or otherwise, or that the Product will in all cases provide adequate warning or protection. User understands that a properly installed and maintained alarm may only reduce the risk of events such as burglary, robbery, and fire without warning, but it is not insurance or a guarantee that such will not occur or that there will be no death, personal damage and/or damage to property as a result. The Manufacturer shall have no liability for any death, personal and/or bodily injury and/or damage to property or other loss whether direct, indirect, incidental, consequential or otherwise, based on a claim that the Product failed to function. However, if the Manufacturer is held liable, whether directly or indirectly, for any loss or damage arising under this limited warranty or otherwise, regardless of cause or origin, the Manufacturer's maximum liability shall not in any case exceed the purchase price of the Product, which shall be fixed as liquidated damages and not as a penalty, and shall be the complete and exclusive remedy against the Manufacturer. Warning: The user should follow the installation and operation instructions and among other things test the Product and the whole system at least once a week. For various reasons, including, but not limited to, changes in environmental conditions, electric or electronic disruptions and tampering, the Product may not perform as expected. The user is advised to take all necessary precautions for his/her safety and the protection of his/her property. 6/91</p>
---	---



VISONIC LTD. (ISRAEL): P.O.B 22020 TEL-AVIV 61220 ISRAEL. PHONE: (972-3) 645-6789, FAX: (972-3) 645-6788
 VISONIC INC. (U.S.A.): 65 WEST DUDLEY TOWN ROAD, BLOOMFIELD CT. 06002-1376. PHONE: (860) 243-0833, (800) 223-0020 FAX: (860) 242-8094
 VISONIC LTD. (UK): COPPERHOUSE COURT, CALDECOTTE, MILTON KEYNES. MK7 8NL. TEL: (0870) 7300800 FAX: (0870) 7300801
 INTERNET: www.visonic.com
 ©VISONIC LTD. 2006 MCT-302T DE2286 (REV. 3, 9/06)



MADE IN ISRAEL